

Engine Adapter Plates


RN65 → RN49

YE-00447

1. Use grease to fixate seal rings.
2. Insert screw with the !SHORT SIDE FIRST! as seen in the picture. (10Nm + Loctite 243)



3. Fix both adapters to the engine block using M6x14 screws. (10Nm + Loctite 243)
Do not forget the washers.

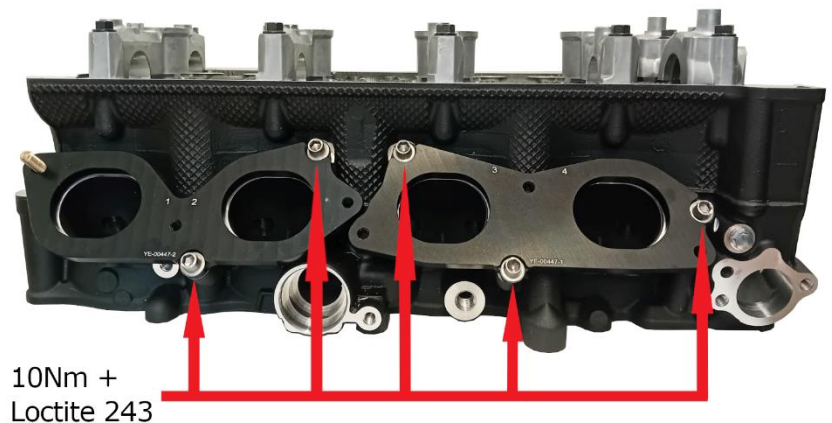

4. Place intake manifold onto adapters and fixate with M6x12 screws (no washers).
Carefull, between openings number 3 and 4 there is a M6x10 panhead screw! (10Nm + Loctite 243)
Add safety nut onto first screw. (10Nm)

