


Rear Quickchange System



YEC-0618004

!FOR CLOSED CIRCUIT USE ONLY!

1. Remove the rear wheel.
2. Cut all 6 sprocket studs as seen in the picture and use the lowheight nuts included in the kit. →
3. Remove the chain pullers screws.
4. Remove the caliper from the caliper holder.
5. Fix the slide pin from the old caliper holder to the new holder. (23 Nm, use Loctite 243)
6. Loosen screws. (1)
7. Fix the YART chain pullers to the swingarm on both sides with screw (2). (23 Nm, use grease)
8. Close screws (1) (3Nm)

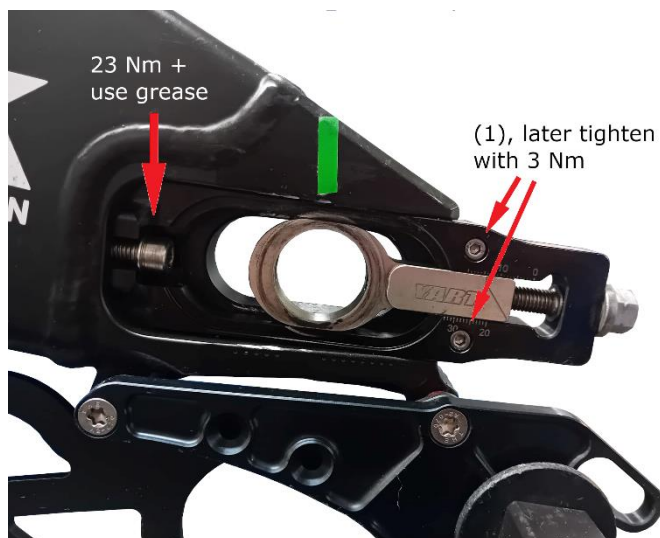

9. Fix the caliper holder to the chain puller. (1 Nm, use Loctite 243)

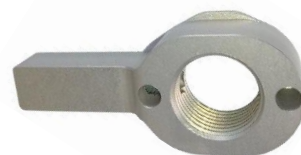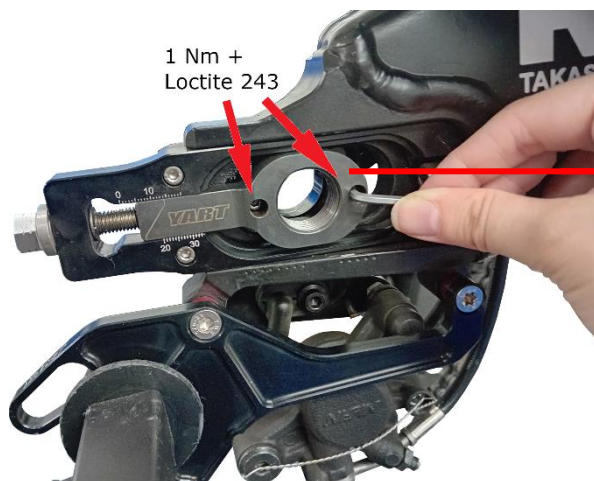

1: For handtools only



2: For impactor gun also, sold separately in webshop

10. Fix the rim support to the swingarm. The orientation can be seen on the picture below. (10 Nm, use Loctite 243)



11. Install the caliper. (use Yamalube wheel bearing grease)



5: 64mm Brembo caliper underslung bracket




3: OEM caliper underslung bracket



4: OEM caliper OEM bracket

12. Install the rear wheel, don't forget the washer between the chain puller and the wheel nut.

13. Adjust the chain pull by turning the allen screw.

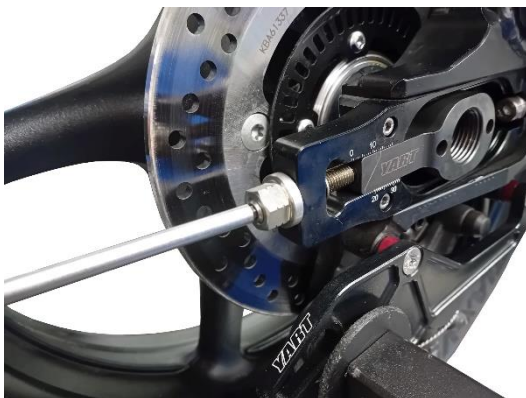

14. Close the axle with 100 Nm. →

15. Check the functionality of the wheel and the brake.

